



DOUBLE CAP EARMUFFS

Features:

ADJUSTABLE

FLEXIBLE





Double CARE Double the SAFETY



Fitting Instructions:

- 1. Extend the headband and cross the top of head. Place the ear cups over the outer ear (picture A).
- 2. Adjust the headband by moving up and down
- 3. The ear cushions should seal firmly against the head (picture C-D). For best results, remove all hair under the cushion.
- 4. Noise reduction will be adversely effected by anything that impairs the seal of the earmuffs cushions against the head such as thick spectacle frames, balaclavas, etc. (picture E-F).















Perfect for:



Industrial















Travel

Yard Work

HIGH PERFORMANCE TECHNOLOGY

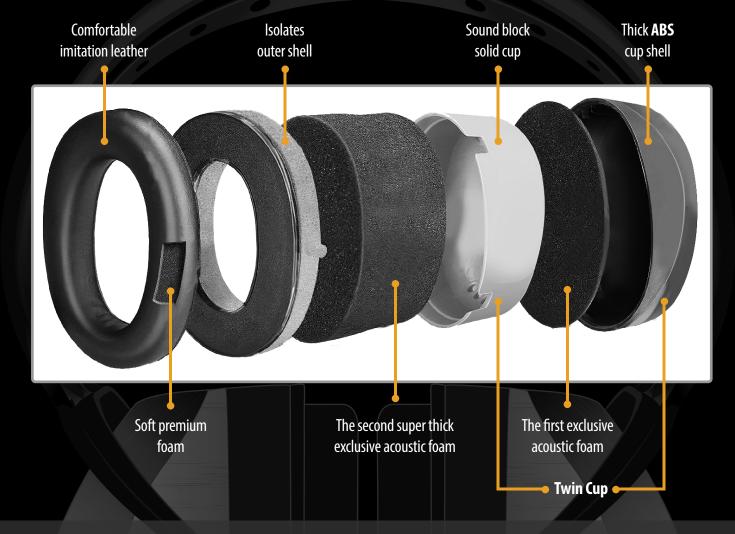

- **Soft premium Foam** It adds comfort and better seal around your ears.
- Second super thick Foam More effective in blocking sound.
- Sound block solid cup Unique outer plastic shell for high performance.
- Dielectric Withstands use and abuse, while protecting workers in electrical environments.

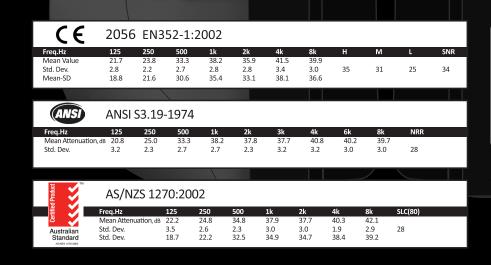





SPECIFICATIONS:

Earmuff size: 100 x 75 mm Earmuff weight: 238 g

Headband size: 245 ~ 335mm x 35 mm

Product Code: 10250





info@canasafe.com | www.canasafe.com





